


Dimensions - Stetsbar for Jaguar/Jazzmaster (modern)

This document shows a top down view of the modern Jaguar/Jazzmaster baseplate and provides measurements for all of the critical dimensions that may be needed to ensure the unit will fit correctly to the guitar.

For more information please contact your regional Stetsbar support center.

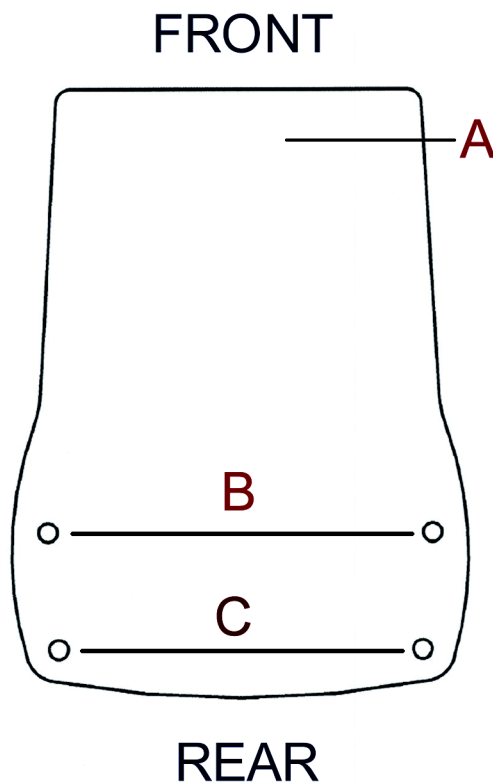

- A. Scale Length - 15/32 inches or 12mm from front
- B. Front hole spacing - 3 5/16 inches or 84mm
- C. Rear hole spacing - 3 1/8 inches or 79mm

Stetsbar bridge height measured at the top E saddle should be:
Minimum 11/16 inch 17.5mm
Maximum 13/16 inch or 20.5mm