


## Dimensions - Luthier/OEM Style Stetsbar v1

This document shows a top down view of the Stetsbar Luthier/OEM style baseplate and provides measurements for all of the critical dimensions that may be needed to ensure the unit will fit correctly to the guitar.

For more information please contact your regional Stetsbar support center.

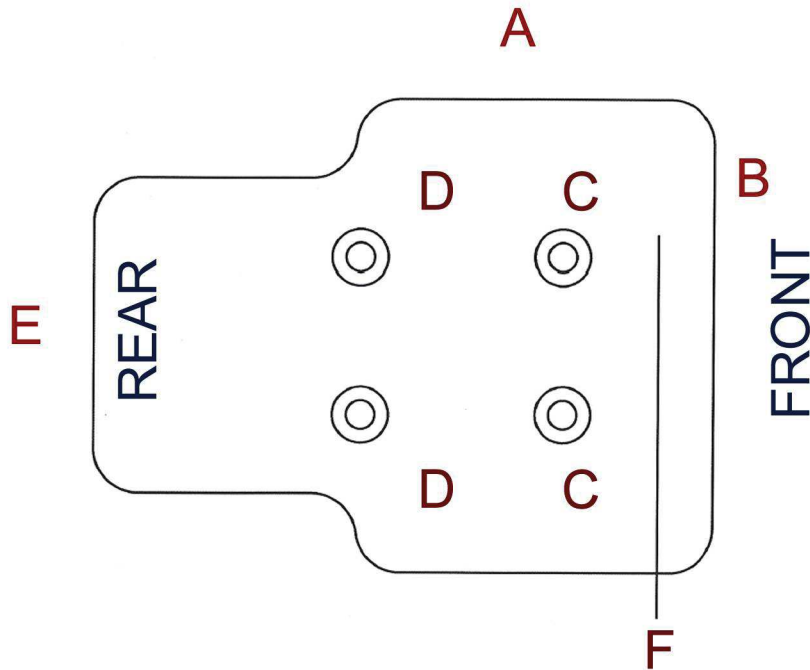

- A. Baseplate length overall -  $3 \frac{7}{16}$  inch or 88 mm.
- B. Baseplate width at front -  $2 \frac{5}{8}$  inch or 67 mm.
- C. Front mount points for baseplate - 2 screws from front -  $\frac{13}{16}$  inch or 21 mm, spacing -  $1 \frac{7}{8}$  inch or 22 mm.
- D. Rear mount points for baseplate - 2 screws from front mount points -  $1 \frac{1}{8}$  inch or 29 mm, spacing -  $1 \frac{7}{8}$  inch or 22 mm.
- E. Baseplate width at rear -  $1 \frac{3}{4}$  inch or 45 mm.
- F. Scale length from front -  $\frac{5}{16}$  inch or 8 mm.

Stetsbar bridge height measured at the top E saddle should be:

Minimum  $\frac{11}{16}$  inch 17.5mm

Maximum  $\frac{13}{16}$  inch or 20.5mm